

# Boot Parameters

## Modify the Linux boot parameters

```
sudo nano /etc/kernel/cmdline # Add or modify the options you need
sudo u-boot-update # Execute the command to update the boot parameters
```

## Reboot

```
# You can check the parameters using cat /boot/extlinux/extlinux.conf
sudo reboot
```

[🐛 Report Issue](#)

[✎ Edit this page](#)